

# How to set

## Blower setting Bio Comfort / Scotte / Woody, ect.

Blowing Parameters for the various fans that are being used on the pellets burner:

### Version 4 and 5

To get in to the menu, Hold SET inside 8 sec. while power is put on the control box.

### Version 6

press SET when selectable languages.

### Version 6.5 >

Adjuster the blower settings in Stages 4 under blower

		Bio Comfort or Scotte	Blower Low A	Blower Mid G	Blower High B	Kwh C	EXTINGUISH TIME Version 6
EBM 85	N/A	16kw	30	60	100	16	5
EBM 85	1,0	24kw	30	60	100	24	5
EBM 108	1,0	16kw	15	18	22	16	5
EBM 108	1,0	24kw	15	25	35	24	5
EBM 108	1,5	16kw	12	15	20	16	5
EBM 108	1,5	24kw	12	23	35	24	5
EBM 108	1,5	30kw	12	28	45	30	5
Ecofit 108	1,5	16kw	5	10	15	16	5
Ecofit 108	1,5	24kw	5	12	20	24	5
Ecofit 108	1,5	30kw	5	14	25	30	5
Rebeck 108	1,5	16kw	12	15	18	16	5
Rebeck 108	1,5	24kw	12	17	22	24	5
Rebeck 108	1,5	30kw	12	18	25	30	5
Rebeck 97	1,0	16kw	12	16	20	16	5
Rebeck 97	1,0	20kw	12	17	22	20	5
Rebeck 97	1,0	24kw	12	18	24	24	5
Rebeck 97	1,0	30kw	12	20	28	30	5
FL085	N/A	10kw	15	22	30	10	5
FL085	N/A	20kw	15	25	35	20	5

**Note:** that the values are only recommended, and must be adjusted to the circumstances.

## Wire connection

Blower	GND	N	L1	L2
EBM 85	N/A	Blue	Braun	
EBM 108	Yellow / green	Blue	Black	Braun
ECOFIT 108	Yellow / green	Blue	Black	Braun
REBECK 108	Yellow / green	Red	Blue	Yellow
REBECK 97	Yellow / green	Red	Blue	Yellow
FL085	N/A	Black	Black	